



YAK BARROW


INSTRUCTION MANUAL

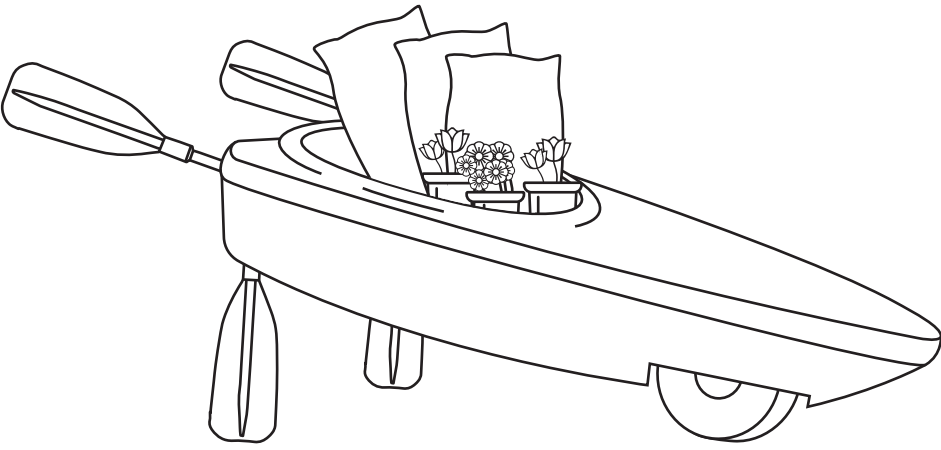


YAK BARROW

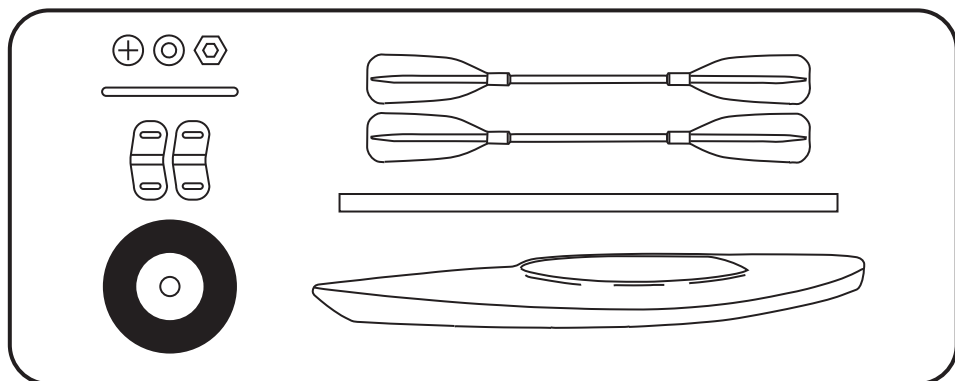


- 1.** Take your saw and saw that Yakoff's bottom off right behind the seat.

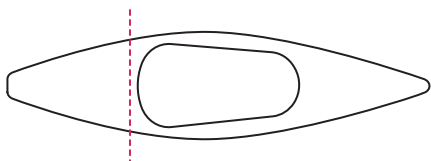

- 2.** Flip the front end of the kayak and cut a rectangle into the top. This is where the wheel will go.

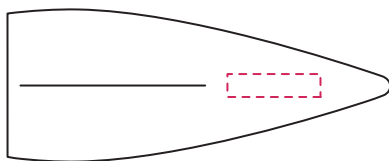


- 3.** Cut two paddles into even halves.

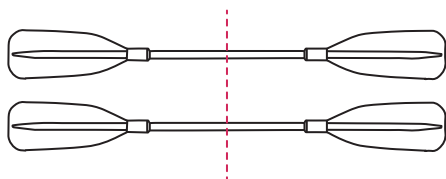


TIP #1

Wear Gloves! Yakking off can be dangerous.

- 4.** Then cut 2x4 in half and mount them inside your Yakoff to support the wheel

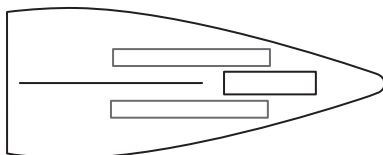

- 5.** Slide the paddle halves into the holes in the bottom.
Slide the other paddle halves through the back.

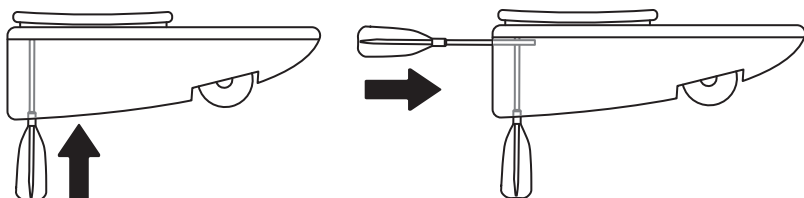

-
- You're so done! You've successfully transformed your Yakoff into a handy Yakbarrow. Now go out there and get barrowing!
- 6.**

